

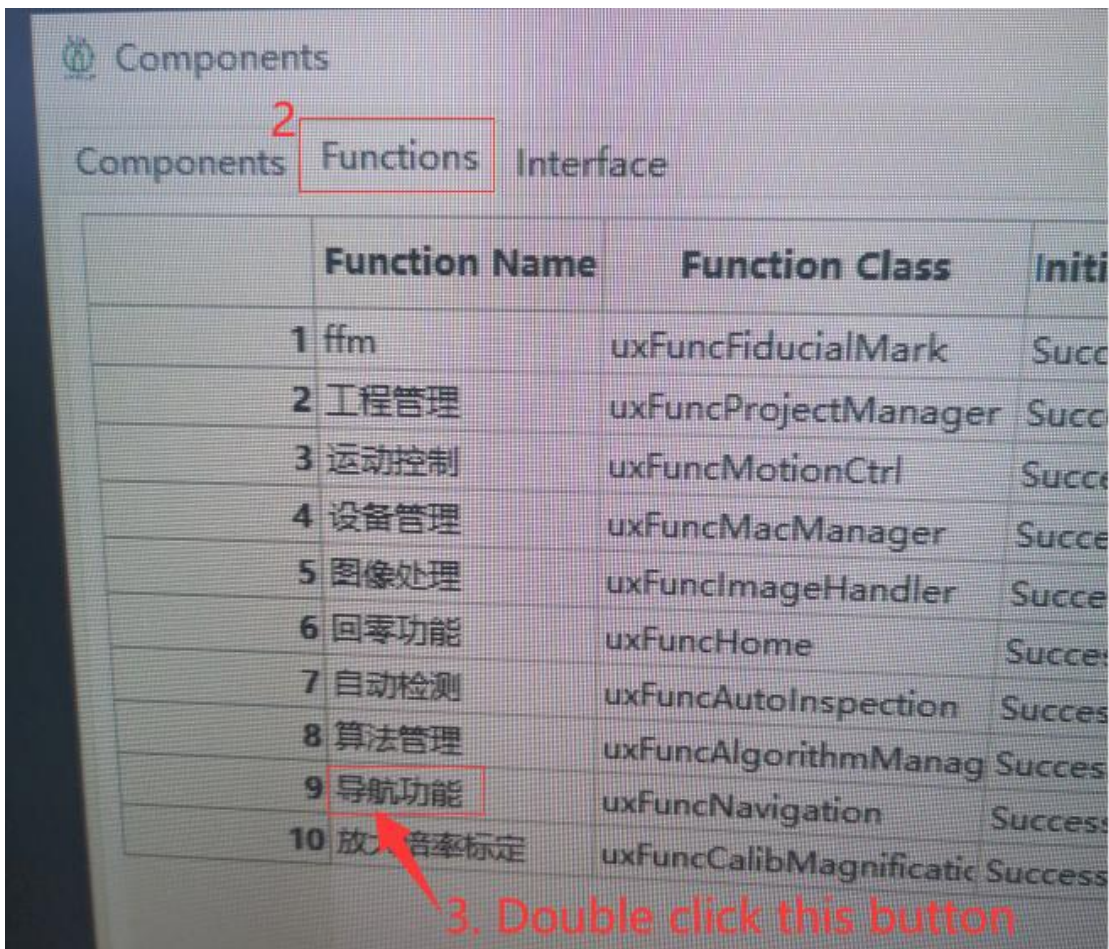


# Unicomp X-Ray Software Operation Tips (AX7900, AX8200MAX, AX9100)


## 1. Loading Table Auto Comeback

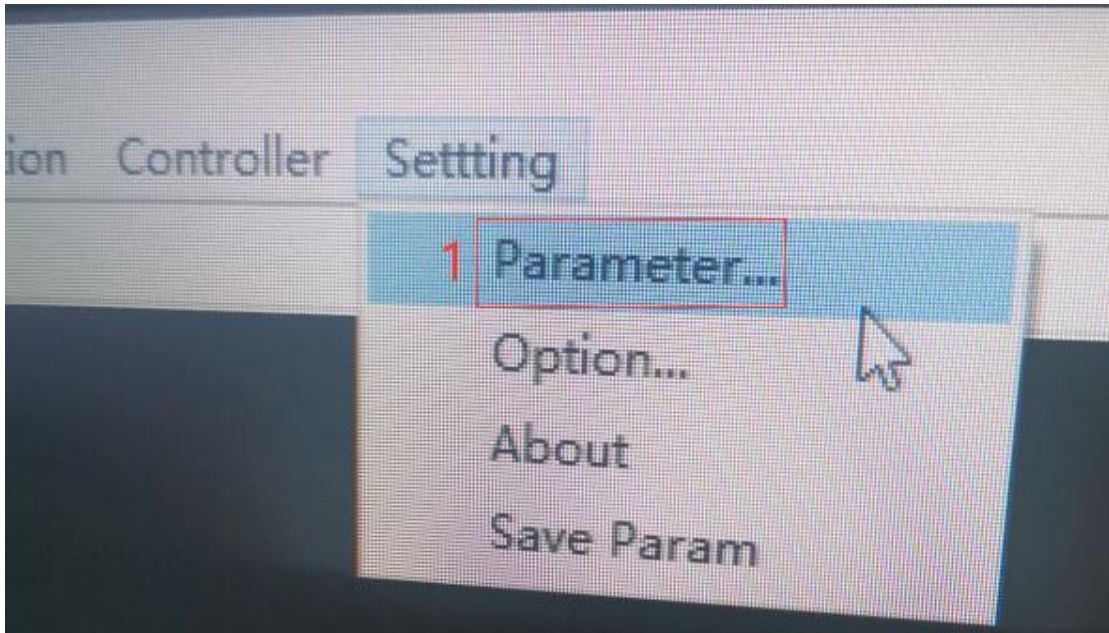

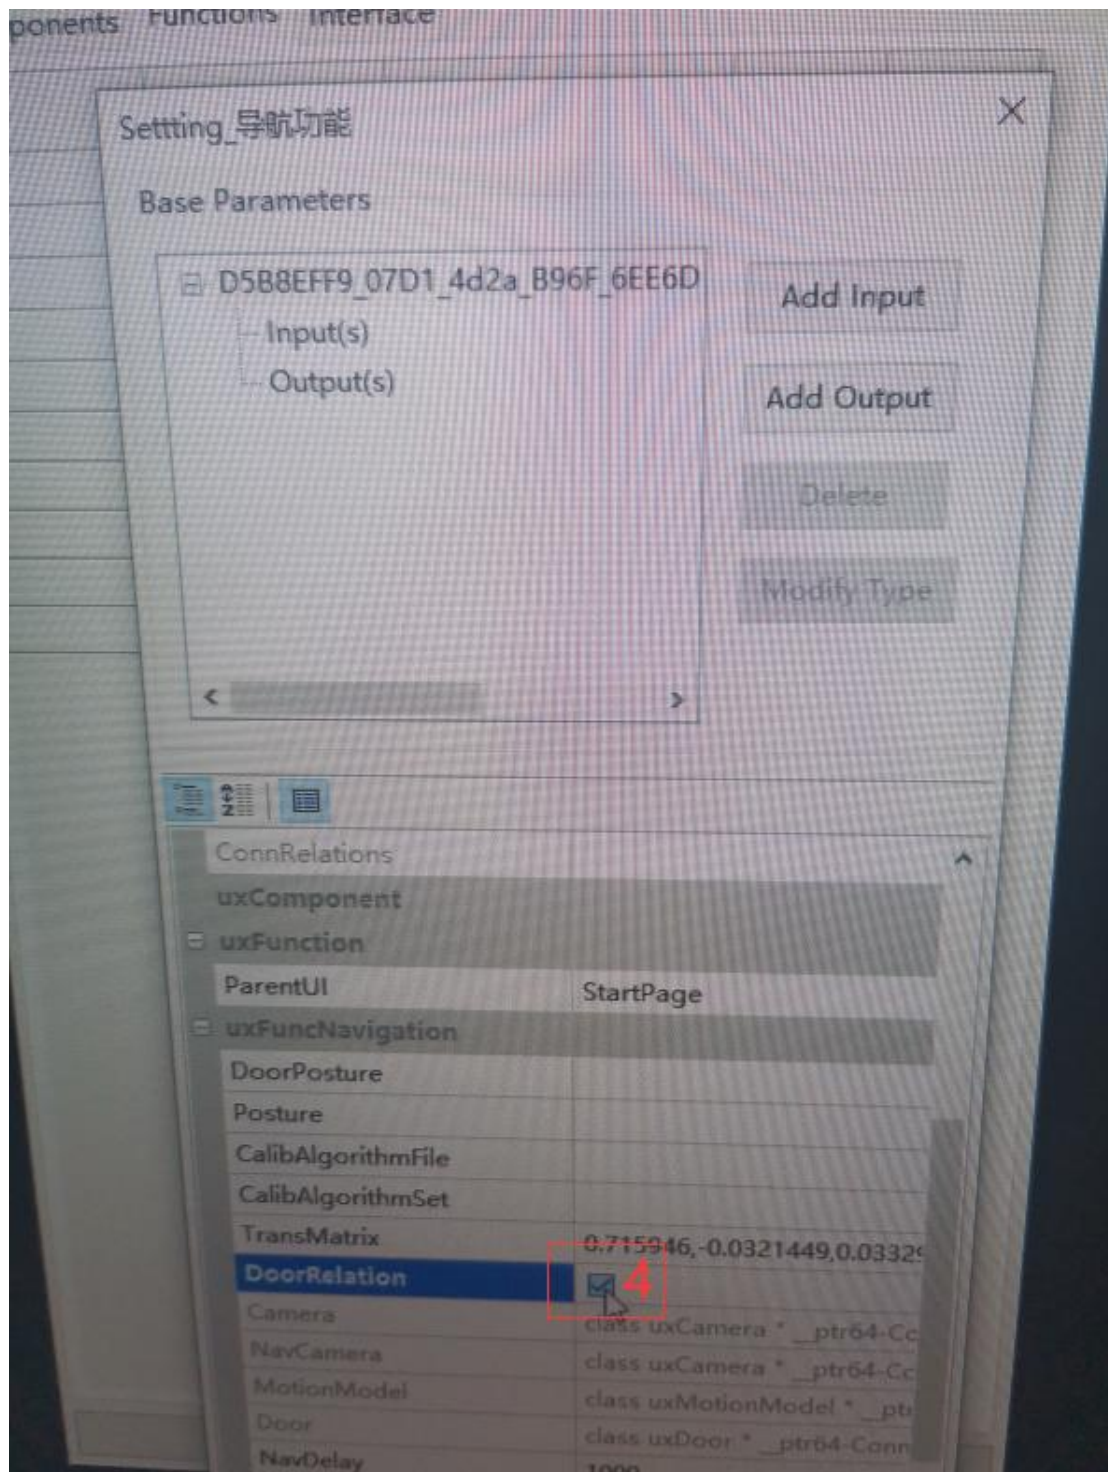

Remove the  , it will disable the table auto-movement.


2. Please don't choose the item "Calibration" and keep it as bellow picture.

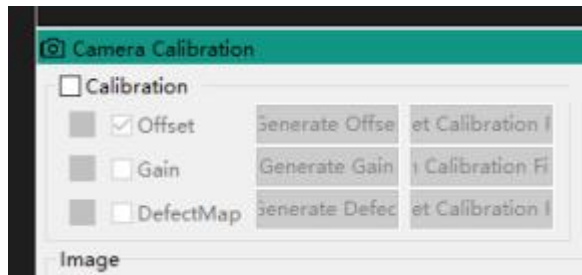


3. Regarding the demo, the customer asked me for a tool that, taking the image in the center of the LED, would give a report on the area as a percentage with void but The current tool does not allow color settings and therefore does not properly filter irregularly shaped voids ( leds-to-qfn..).


Answers: There're 3 methods.


Method 1: Use the tool ToolBGA to measure the voids.

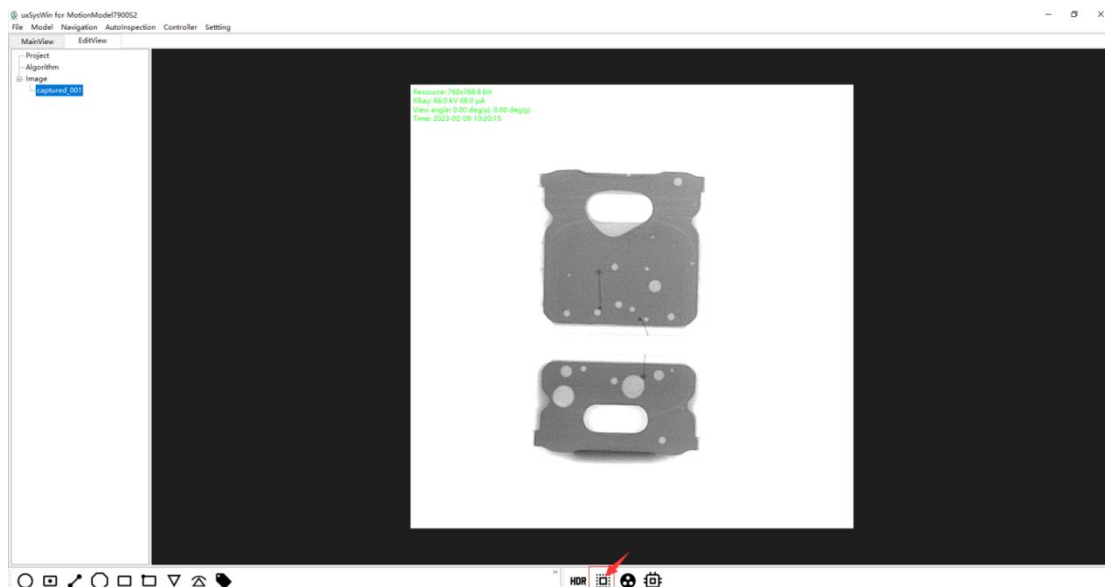


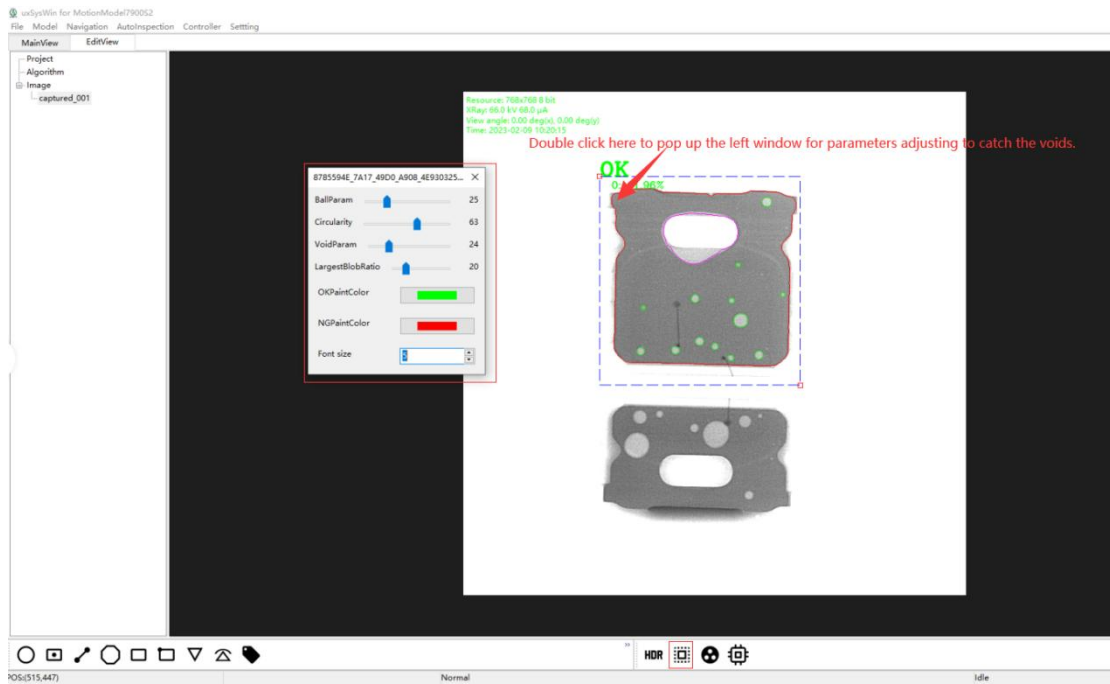





Method 2: Use the tool ToolIC to measure the voids.

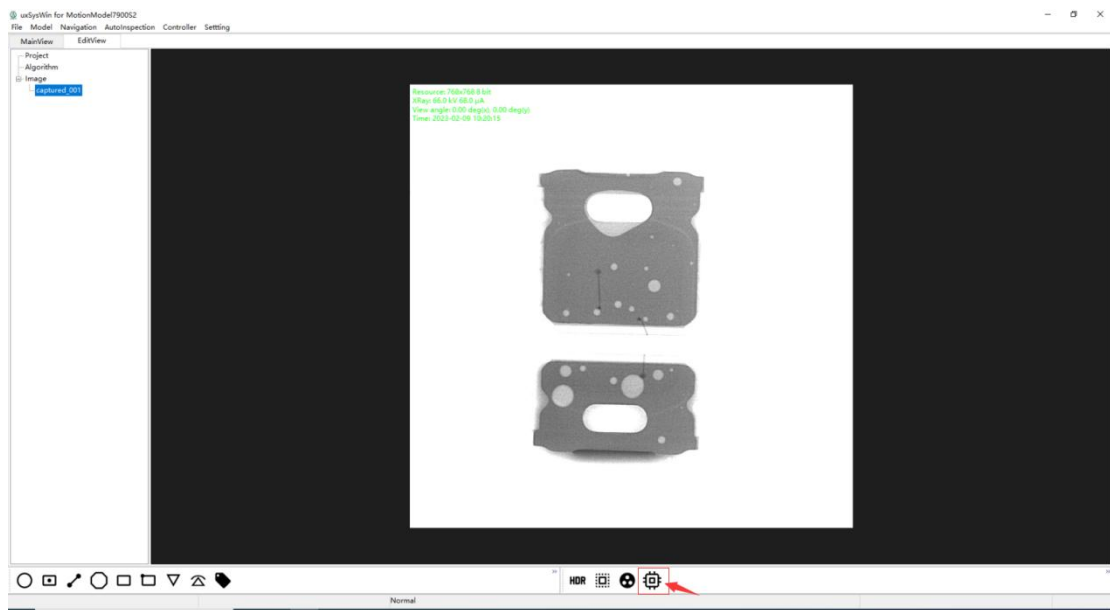

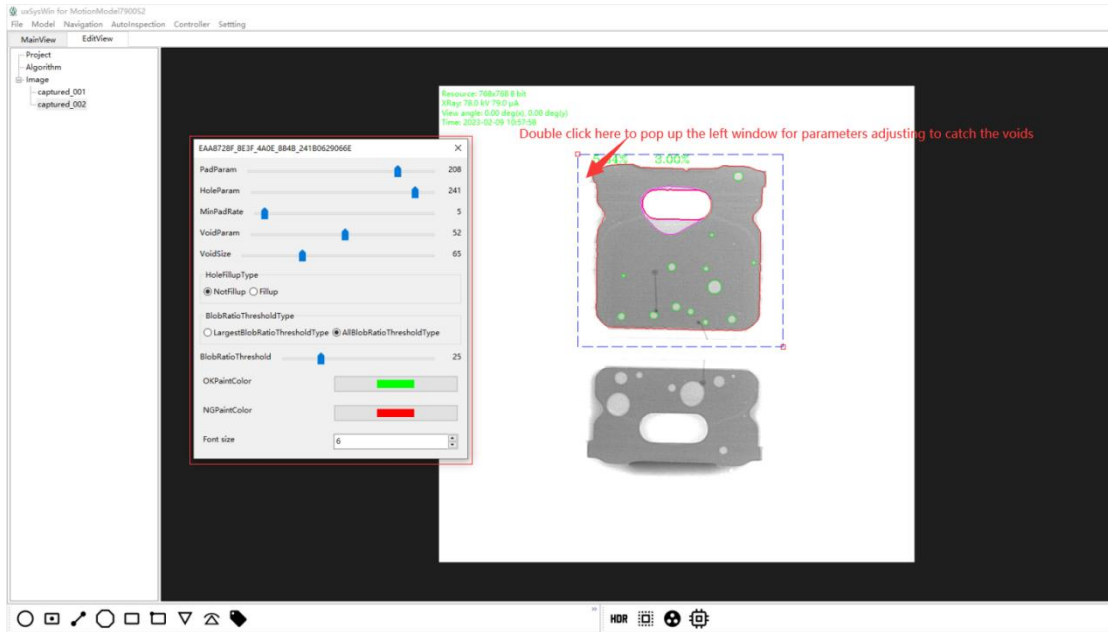

If it's new thing and the existing tools can't catch the voids, then it will have to use the method 3: Manual checking.

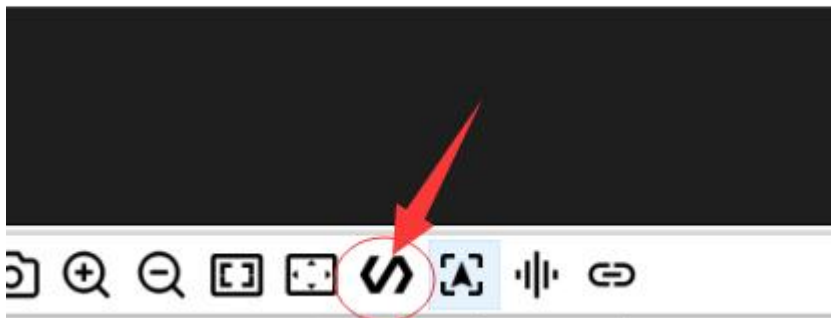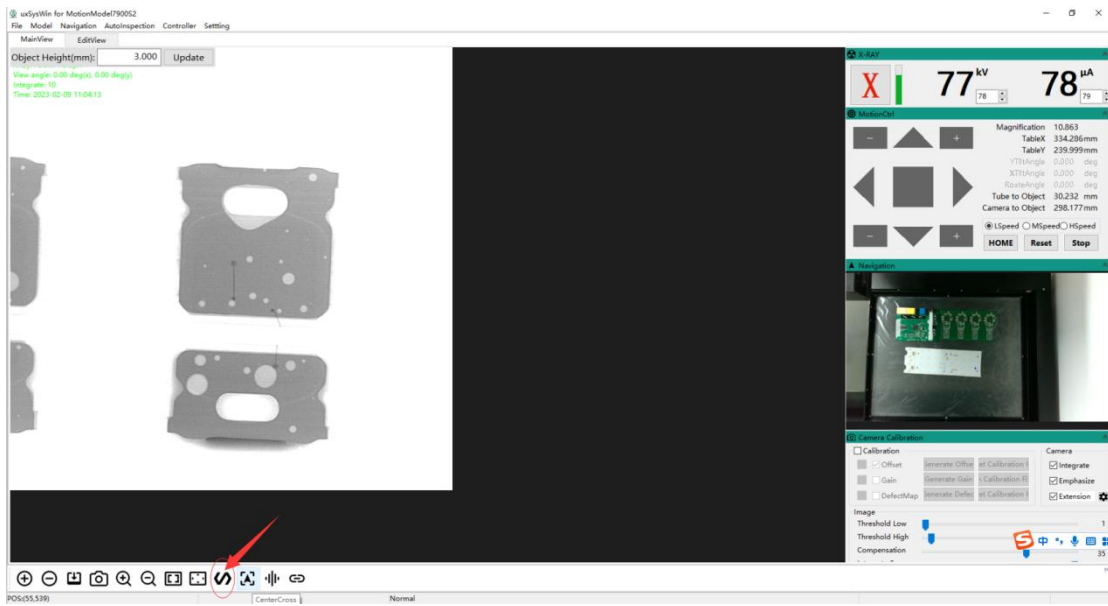

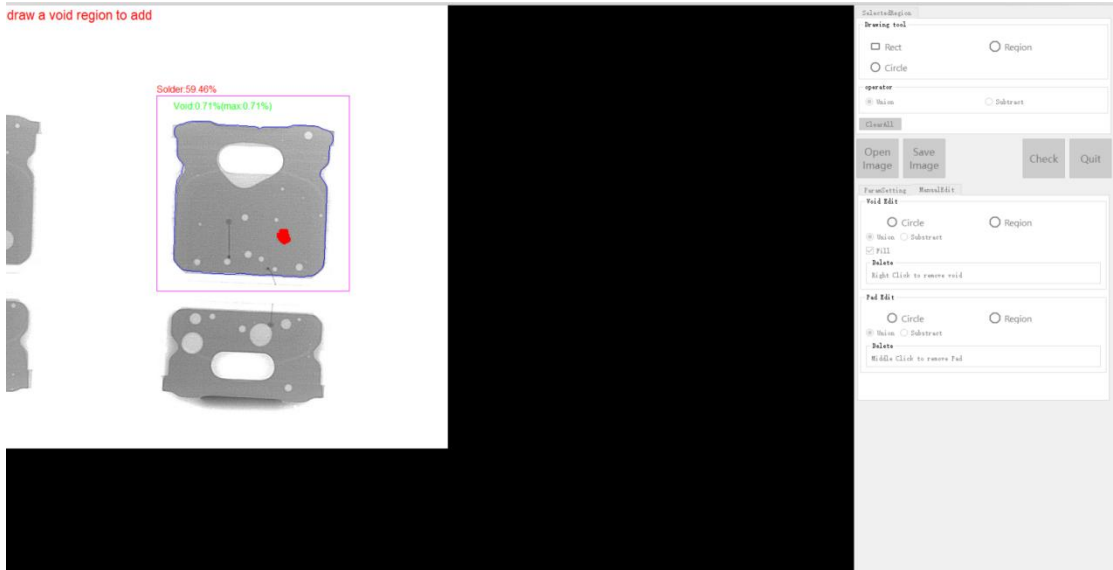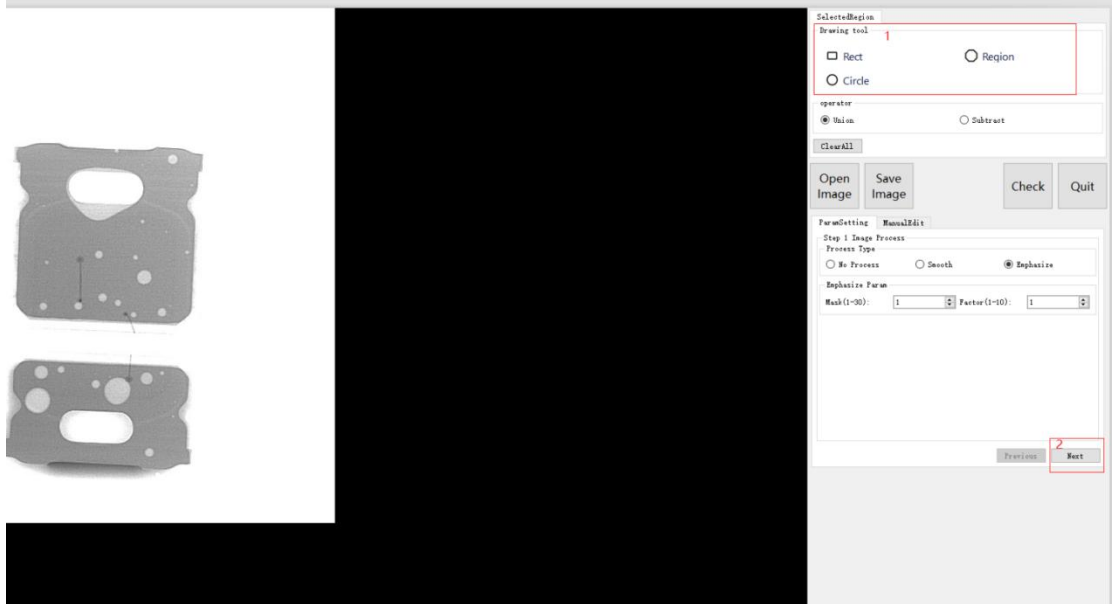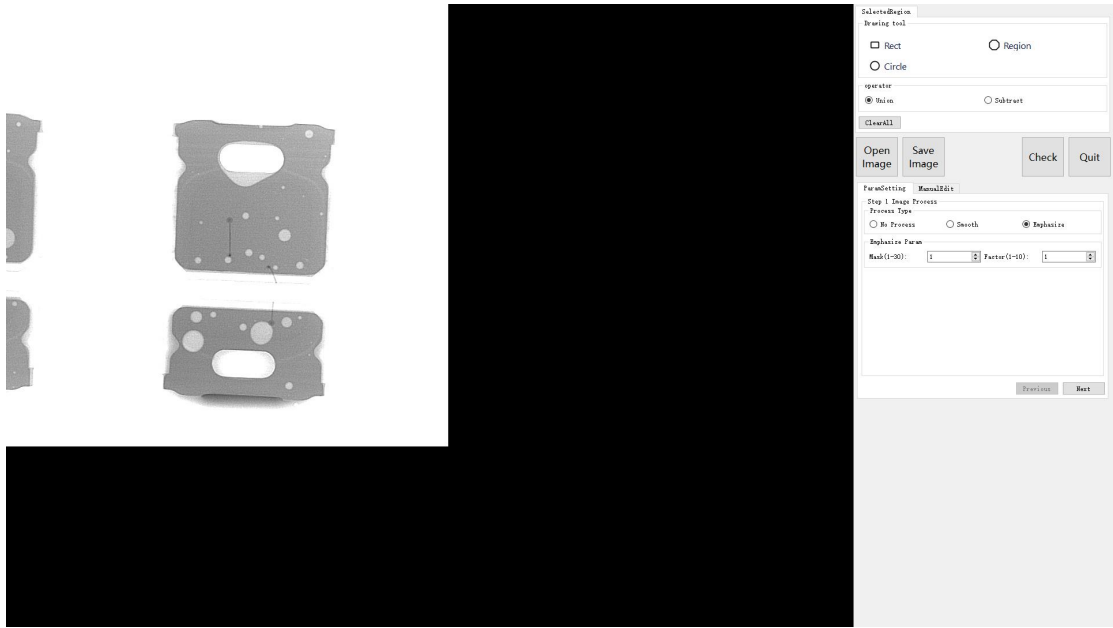

4. if it's in Chinese on this interface, then it needs to operate as bellow steps to change it to English.

